

## 1. Settings

Before the competitors arrive, the 'Position n°' has to be set and the transmitter has to be switched ON.

The position number should be given by the rally organizer.

The position n° appears on the top right of the display.

To switch the transmitter ON, the Mode has to be set on 'rF ON'

A countdown will switch the transmitter OFF after 240 minutes.

A blinking 'r:' character appears beside the time when the transmitter is ON.

The mode and countdown value can be checked pressing the 'ESC' button.

### 1.1. Enter the Menu

To enter the setup menu, hold both 'ESC' and 'ENT' buttons for minimum 5 seconds. After this delay, the first function in the menu will appear.

Four functions are available:

- F1: Mode, set the mode
- F2: P-n°, set the Position number
- F3: time, set the time
- F4: ISP, In-System Programming mode.

Use:

- 'STOP/SELECT' button, to select the function.
- 'RESET' button to go back to F1.
- 'ENT' button to execute/enter the function.
- 'ESC' button to quit the menu.

### 1.2. F2: Set the Position n°

Enter the setup menu, select 'P n°' function and press the 'ENT' button.

Use the 'STOP/SELECT' button to set the units.

Use the 'RESET' button to set the tens.

Press 'ENT' to validate the change or 'ESC' to go back to the menu leaving the P-number unchanged.

Position n° 't0' to 't9' should not be used during the rally, their purpose is to test the power of the RF signal.

### 1.3. F1: Set the Mode

Enter the setup menu, select 'Mode' function and press the 'ENT' button.

Use the 'STOP/SELECT' button to select the mode.

The following modes are available:

rF ON	radio Frequency ON
rF OFF	radio Frequency OFF

Press 'ENT' to validate the change or 'ESC' to go back to the menu leaving the mode unchanged.

1.4. F3: Set the time Should not be used by the marshal.

1.5. F4: ISP Should not be used by the marshal.

## 2. Positioning

The transmitter has to be mounted on the supplied tripod with legs fully extended and placed as close as possible to the track for best timing accuracy.

## 3. Switch OFF

Don't forget to switch the transmitter OFF when the control is closed

## 4. Low battery warning

If the Low Battery warning appears (LO) on the top right of the display, the battery can be replaced without losing the time if you insert the new battery within 15 seconds.

